
MS double shelf motif 10' x 10'gazebo with net ASSEMBLY INSTRUCTIONS ITEM# MS14-302-008-02

ATTENTION: THIS PRODUCT IS NOT FOR COMMERCIAL USE

INTENDED FOR RESIDENTIAL USE ONLY.

Questions, problems, missing parts with this product? Do not return to your retailer, please call our customer service department 9:00 a.m. to 5:00 p.m.Eastern Standard Time Monday through Friday Phone # 1-800-457-4652. contact us at www.numarkcustomerservice.com.

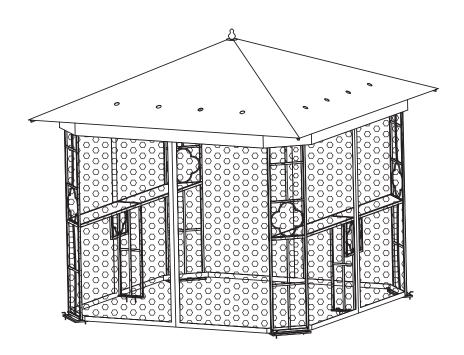

WARNINGS AND CAUTIONS


- * It is essential to place the gazebo on level ground and not less than 6 feet from any obstruction such as fences, garages, the house, overhanging branches, laundry lines, or electrical wires.
- *Assembly by at least four adults is recommended.
- * Oil all metallic moving parts during usage season.
- * Always remove the canopy in heavy wind conditions, otherwise the canopy may tip over and may cause damage to its parts.
- * The user of this gazebo should always inspect it before each use.
- * Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.
- * Keep children away during assembly. This item contains small parts which can be swallowed by children. Children should always be under direct adult supervision while using the product.
- * The manufacturer will not accept responsibly for unauthorized repair of modifications to the gazebo.
- * Retain the assembly instructions for future reference.

CLEANING AND MAINTENANCE

- Wash frame parts and fabric with mild soap and water, rinse thoroughly. Dry frame completely and allow the fabric to drip dry.
- ☑ Do not use bleach, acid, or other solvents on the fabric or frame parts.
- ⊠ Keep all flame and heat sources away from canopy fabric.
 The canopy is made with flame-resistant fabric which meets CPAI-84 specifications. It is not fireproof. The canopy fabric will burn if left in continuous contact with flame source. The application of any foreign substance to the canopy fabric may render the flame-resistant properties ineffective.


Remove all components from the polybag and unwrap all package materials. Please count the components, there are:

NO.	Part	Description	Quantity
A	HBH	Leg Post	4
В		Base	4
С		Top Beam	4
D		Canopy Frame	1
E		Table Top	2
F		Table Top	2
G		Supporting Leg	2
н		Decorating Part	4
ı		Canopy Fabric	1
J		Mosquito Net	1

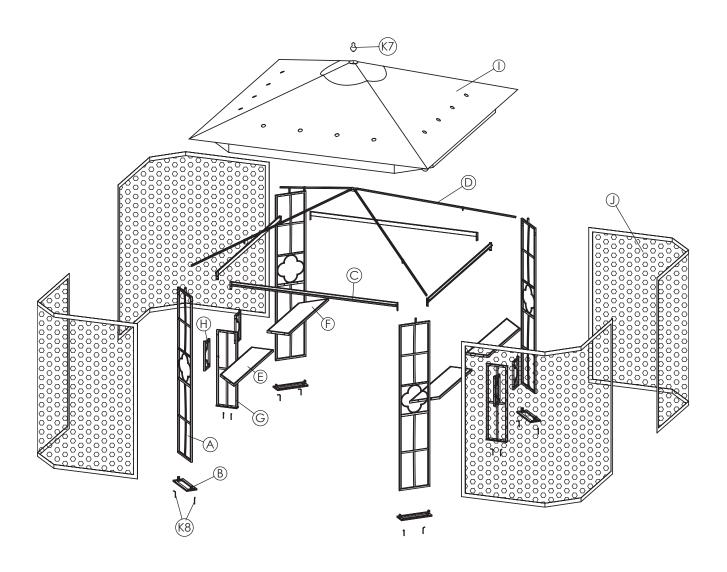


ACCESSERY

NO.	Part	Description	Quantity
K1		M6x15L Bolt	8+1 spare
K2		M6x30L Bolt	4
К3		M6x36L Bolt	28+1 spare
K4		M6x40L Bolt	4
K5		M6 Metal Washer	80
K6		M6 Nut	36+1 spare
K7		Canopy Decorative Finial	1
K8		Lawn Stake	12
К9		Touch-up Paint	1
K10	\Longrightarrow	Open Hex Wrench	2
K11		Allen Wrench	2
K12	8888	Assembly instructions sheet	1

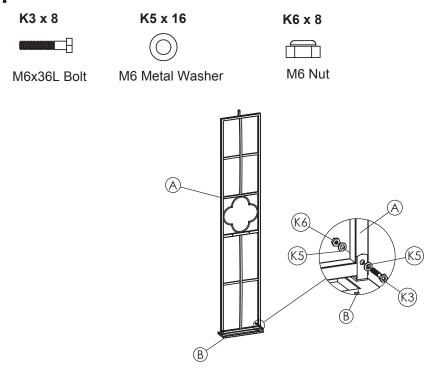


Please don't tighten the bolts fully at this step.

Step2

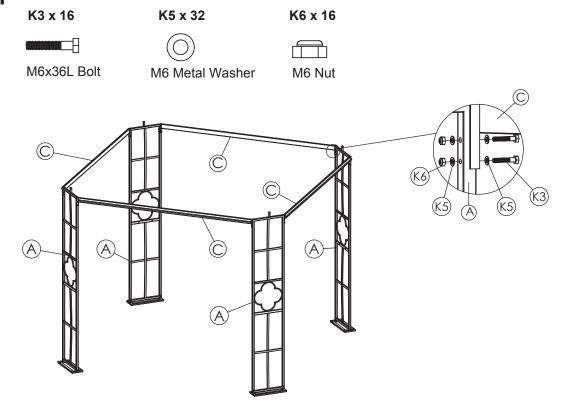


Please don't tighten the bolts fully at this step.


STOP DON'T RETURN TO STORE

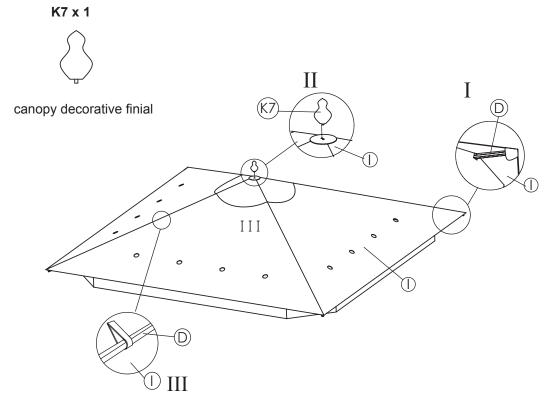


Step4

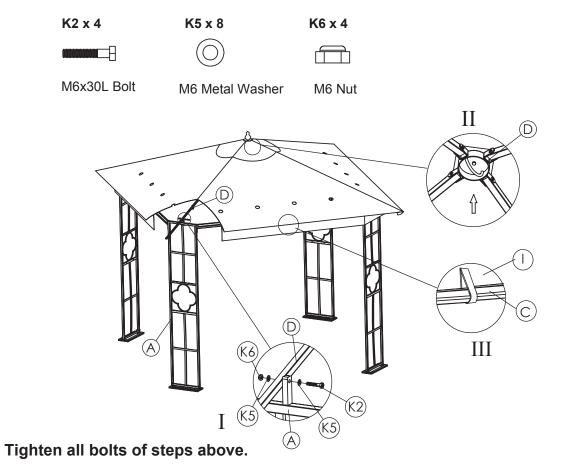


STOP DON'T RETURN TO STORE

 

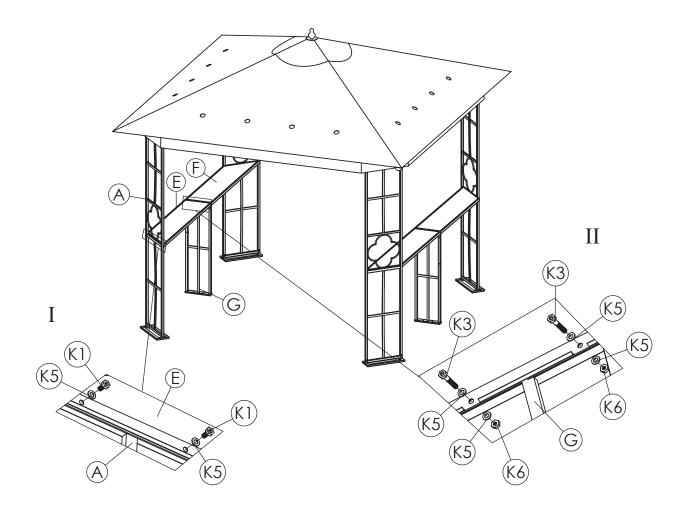


Please don't tighten the bolts fully at this step.

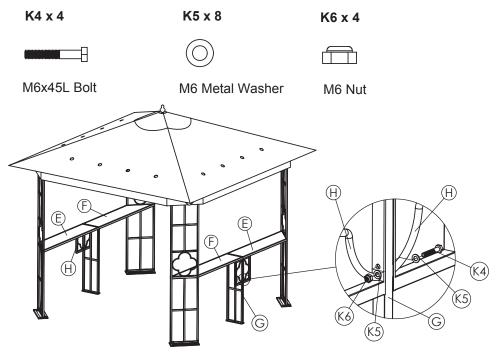


Tighten all bolts of steps above.

Step7



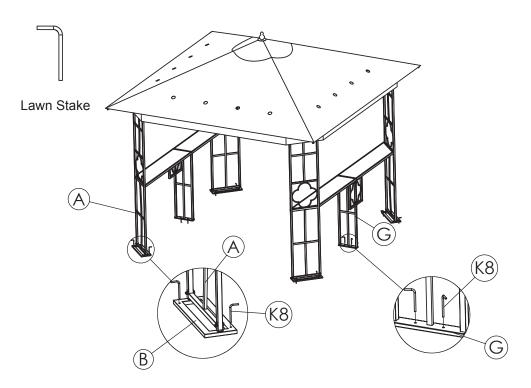

STOP DON'T RETURN TO STORE

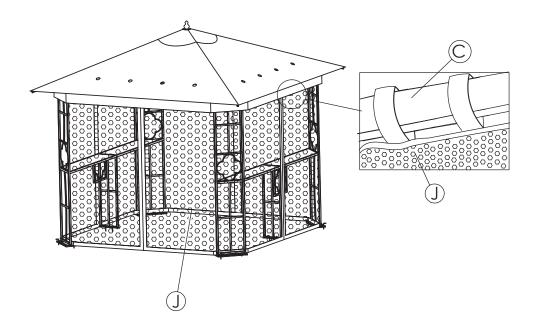

Hang the mosquito net (J) on the top beam (C). Your gazebo is ready for use.

Printed in China.