



6 PERSON INSTANT CABIN TENT - 10 x 9

Item No. CV1009IN
Model No. 30006

Before you begin

Read all instructions thoroughly before beginning set up.

- Select a level site clear of rocks, branches, and other hard or sharp objects, to set up your tent.

⚠ WARNING: Keep clear of overhead power lines.

- Do not set up your tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.
- For best results in windy conditions, position narrow end of tent into the wind.
- Secure with all stakes and guylines provided to prevent property damage or personal injury.
- Two people can easily setup this tent in 60 seconds or less. **Scan the QR code to view our 60 second setup video.**




Setup Instructions:

1 Extend Tent Frame



CAUTION: Avoid pinch points when opening or closing the tent frame.

- Unfold and spread out tent. (Fig. 1)

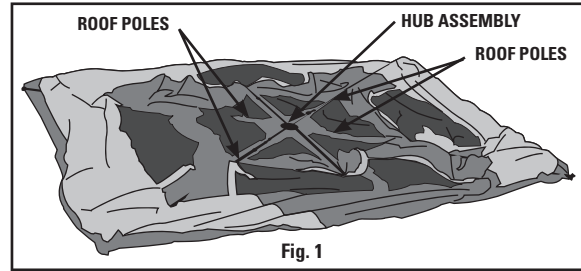

2 Lift Roof Poles



- Lift up on ARM JOINT and ROOF POLE. The tent will partially raise when ARM JOINT is fully extended. (Fig. 2 & 3)
- Repeat step above for the remaining 3 ROOF POLES.

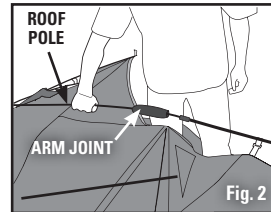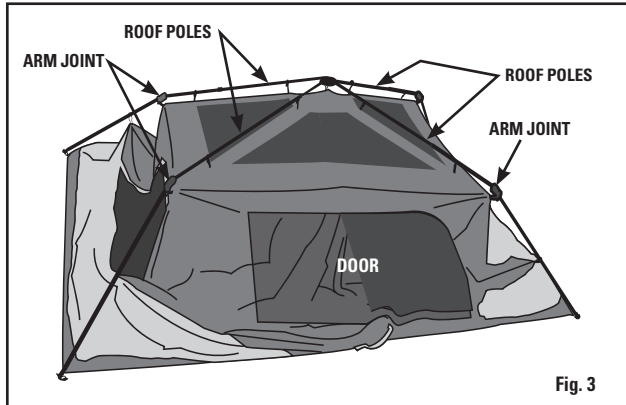

3 Extend Telescoping Leg Poles






- Moving to front 2 corners of tent; extend TELESCOPING LEG POLES until the silver LOCKING BUTTONS "click" into locked position. (Fig. 4)
- Repeat above step for 2 back TELESCOPING LEG POLES. (Fig. 5)

NOTE: You can now easily move your tent to its final position before installing the Rainfly and securing with stakes and guylines.

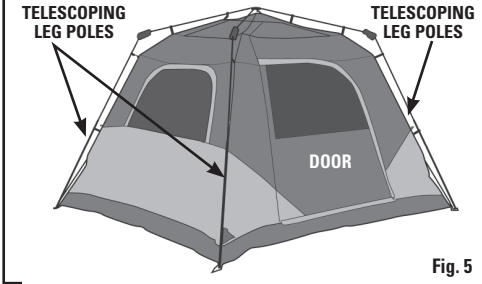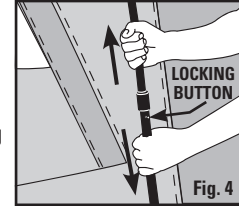

4 Attach Rainfly

- Drape RAINFLY over tent as shown. (Fig. 6)
- Clip HOOK attached to SHOCKCORD of Rainfly onto FABRIC LOOP on tent. (Fig. 7)
- Secure RAINFLY to both LEG POLES with HOOK & LOOP FASTENERS (located on underside of Rainfly). (Fig. 8)

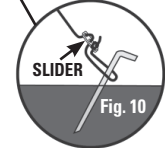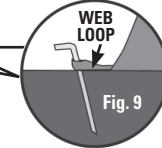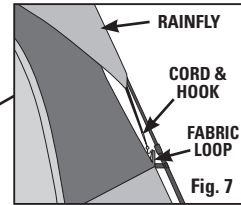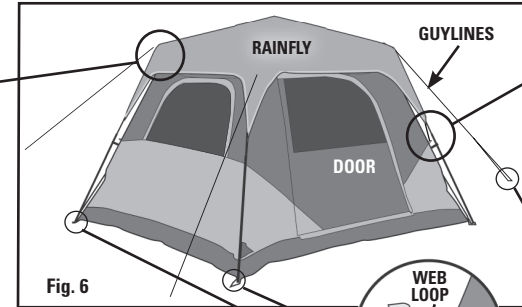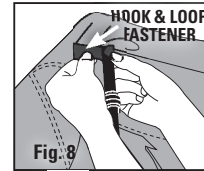

To Secure Tent:

Stake Tent

- Locate WEBBING LOOPS sewn into the corners at the base of your tent.
- Slide STAKE through WEBBING LOOP at each location; then gently extend out before securing. (Fig. 9)

NOTE: Floor of tent should be taut when staked properly.

Secure Guylines

- Locate GUYLINES attached to the tent and unroll.
- Slide STAKE through loop at each location, extend out and drive in to secure. (Fig. 10)

NOTE: Four corner GUYLINES should extend out at a 45° angle from tent & awning.


- Tighten GUYLINES as needed by adjusting the SLIDER up the cord.

(continued on other side)

Tent Features:

Welcome Mat


- Attach Welcome Mat by inserting the plastic toggles through the fabric loops located below the doorway along the base of the tent. (Fig. 11)

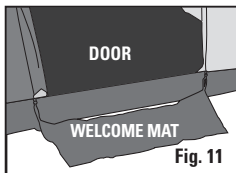

Electrical Cord Access

- Insert electrical cord through access panel in the lower left corner of tent. (Fig.12)

NOTE: Use only UL approved cords rated for outdoor usage.

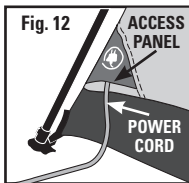


Take Down & Storage Instructions:

To Take Down Tent

Follow the previous steps and illustrations in the reverse order:

- Remember to push the silver **LOCKING BUTTON** and telescope the 4 on the **LEG POLES**. (Fig. 14)
- Push down on the **ARM JOINTS** where the legs meet the **ROOF POLES** starting with the two middle poles first, then the corner poles. The roof will collapse in and then pull all the poles inward under the central hub and then fold up the leg poles.
- Lay the tent down on it's side and roll out the excess air and put back into the bag.

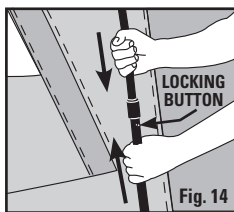

Storing the Tent

- Remove guylines and stakes and place in their storage bag.
- All stakes must be placed in their own storage bag before placing in tent carrying case to prevent damage to the tent fabric.
- Store in a clean, dry area.




IMPORTANT:

THE ORIGINAL FIRE RETARDANT AND WATER REPELLENT PROTECTIVE COATINGS MAY BE COMPROMISED IF SPRAYS OR OTHER CHEMICAL TREATMENTS ARE USED ON THE TENT. FABRIC HAS BEEN FACTORY TREATED. IT IS HIGHLY WATER-REPELLANT; HOWEVER, IT IS NOT WATERPROOF. ALL TENTS CAN EXPERIENCE SEAM LEAKAGE DURING WET WEATHER. IF YOU WANT ADDITIONAL MOISTURE PROTECTION, TRY A SEAM SEALING COMPOUND ONLY; STRICTLY FOLLOW THE MANUFACTURER'S DIRECTIONS. IT IS RECOMMENDED THAT YOU SEAL THE TENT DURING THE INITIAL SETUP AS WELL AS PRIOR TO EACH CAMPING SEASON. SEAM SEALER COMPOUNDS CAN BE PURCHASED AT YOUR LOCAL CAMPING PRODUCTS OUTLET. FOR MISSING PARTS CALL 1-888-774-5840.

PLEASE DO NOT RETURN THIS PRODUCT TO THE RETAIL STORE.

Organizer

- Attach Organizer by inserting the plastic hooks located at each corner through the fabric loops located at the back of the tent. (Fig. 13)

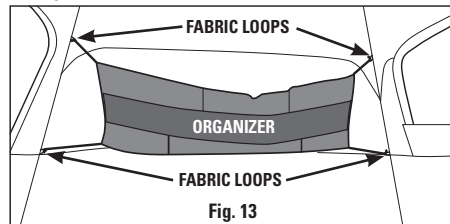

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is **NOT LEAKAGE** through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT TO REMOVE STAKE.**
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

WARNING: Keep all flame and heat sources away from this tent fabric.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent is made of flame-resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIRE-PROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the product fabric may render the flame-resistant properties ineffective.

DO NOT use fuel burning devices inside or near tent materials.

DO NOT permit children to light matches, operate burning appliances, or handle any flame sources in or near the tent.

All fuel-burning appliances use air. Lack of fresh air can cause poor combustion and deadly carbon monoxide. Never use burning appliances in tent without providing a fresh air opening of at least 40 square inches.

- Never use fuel burning products while sleeping.
- Do not smoke, use matches, candles or open flames of any kind in or near the tent.
- Build campfires several meters downwind from the tent; making sure to fully extinguish campfires before leaving campsite or retiring for the night.
- Do not refuel lanterns, stoves or heaters inside tent.
- Do not cook inside tent.
- Do not store flammable liquids inside tent.

REPAIR PARTS LIST

| Description | Part Number |
|-------------|--|
| 90001 | Plastic Clip (16mm) |
| 90002 | Plastic Clip (20mm) |
| 90019 | Tent Stakes (Large) |
| 90020 | 48" Replacement Bag with Compression Straps (Black) |
| 90021 | Base of Leg Pole Plastic Connector (T-shape that goes into the foot) |
| 90029 | Center Hub |
| 90030 | Corner Roof Pole & Leg Pole (4 Per Tent) |
| 90031 | Rainfly |
| 90032 | Floor Mat |

6 Month Limited Warranty

Campvalley (Xiamen) Co., Ltd. Warrants for a period of six months from the original date of purchase, this product against any defects in materials or workmanship. At its discretion, Campvalley may provide replacement parts to original purchaser. Original receipt or proof of purchase is required. Campvalley will not be responsible for shipping costs incurred outside the USA. Warranty is valid for the original purchaser from the date of purchase and is not transferable.

This Warranty Does Not Cover

This 6 Month Limited Warranty does NOT cover normal wear and tear, abuse or misuse of this product including damage from inclement weather conditions, including: wind, rain, hail, lightning, tornados. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this 6 Month Limited Warranty. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Under no circumstances shall Campvalley (Xiamen) Co., Ltd be liable or responsible for any incidental or consequential damages.

Our products are designed and manufactured to the most stringent specifications. However, inclement weather including wind and rain may loosen stakes, invite pooling and cause the frame to weaken. If pooling should occur it is advisable to adjust the stakes and guylines to avoid damage to the frame and fabric. In case of inclement weather remove all valuables and persons and seek appropriate shelter.

This product is designed and intended for Recreational use only.

To Obtain Warranty Service

Call 1-888-774-5840 for repair parts or product questions.

NOTICE: DO NOT RETURN PRODUCT TO RETAIL STORE.

Campvalley (Xiamen) Co., Ltd.
No.18th, West Road 3, Jinyuan, Jimbei District, Xiamen, Fujian 361022 (China)
Customer Service: 1-888-774-5840
Made in Bangladesh • Printed in Bangladesh