



## Connecting brings out your TV's full potential!

You'll have access to thousands of streaming channels\*.

### Make any night a movie night

Choose from over 500,000+ movies and TV episodes across major streaming movie services like Netflix, Vudu, Hulu and more. Choose from free, rental, and subscription services.

### Stream sports on the big screen

Choose from over 140 sports channels like ESPN, NBC Sports, NBA, NFL, MLB, WWE, and more.

\* Payment required for some channels and content. 4K and HDR require 4K and HDR content, is not available on all channels and is subject to channel provider bandwidth requirements. Channels are subject to change and vary by region.  
\* Cancel before the end of the free trial periods to avoid recurring monthly subscription fees. Credit card may be required.

### Explore your passions

In addition to popular streaming channels like HBO NOW, SHOWTIME, PBS Kids, and NBC, your Roku TV also offers hundreds of streaming channels to fuel your passions – including fitness, cooking, religion, outdoors, international programming, and much more.

## Need more help?

To better support you, please have your model and serial number ready.

Online Chat: [www.onntvsupport.com](http://www.onntvsupport.com)

Email: [customerservice@onntvsupport.com](mailto:customerservice@onntvsupport.com)

Customer Support:

# 844-334-2355

9am – 9pm EST daily

Visit [go.roku.com/tvmanual](http://go.roku.com/tvmanual) for the complete Roku User Guide

# onn. • Roku TV

**Model: 100005395**  
**100005842**

**\*ROKU, ROKU TV and the ROKU logo are the trademarks of Roku, Inc. All other trademarks and logos herein are the property of their respective owners.**

What's in the Box?

Check to make sure you have everything below.

What's in the box

  
onn. • Roku TV

  
TV remote

  
Phillips head screwdriver

  
TV stand

  
2 x AAA batteries for remote

  
Wireless router (needed for streaming)

  
4 Screws

  
Computer, tablet, or smart phone (needed for setup)

  
Internet connection (needed for streaming)

Set up your TV & Power up

1 & 2

Step 1

Remove your TV from the box  
Be careful, it's heavy!

To mount on a wall  
Follow the instructions that come with the wall mount.  
Wall mount sold separately.

To use the stand  

A

To prevent damage to the screen, carefully place your TV on a soft, cushioned surface.

B

Put the stands into the TV, align the stands with the screw holes located on the TV.

C

Secure the stands to the TV with four (4) screws.

  
NOTE: Actual placement of TV ports may vary by model.

 
Step 2

In this step, we'll make sure all systems are GO!

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.

Connect your power cord to the TV, then plug it in to the wall outlet.

Power Tip! Always replace dead batteries with two brand-new batteries from the same manufacturer. Never use damaged batteries.  
If your remote gets warm/hot during use, discontinue use and contact customer support immediately at [www.onn的支持.com](http://www.onn的支持.com)

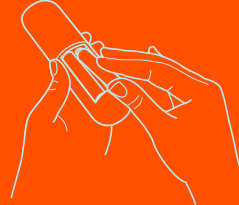

Grab your remote

3

The TV remote should feel right at home in your hand. It was designed to be incredibly intuitive for watching TV and navigating on-screen menus.

Here are some buttons you should know about.

A

Power

Turn TV on and off

B

Back

Return to previous screen

C

Directional keypad

Directional keypad

D

Channel recall/jump back

Replay the last few seconds of streaming video

E

Rewind

Rewind streaming video, scroll left one page at a time

F

Sleep

Sets the sleep timer

G

Home

Return to Roku Home screen

H

Volume

Raise and lower volume

I

View more options

View more options

J

 
Fast forward

Fast forward streaming video, scroll right one page at a time

K

Play/pause

Pauses or resumes playback

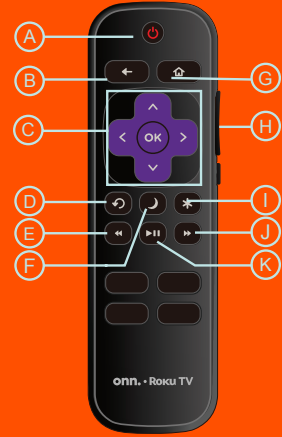

Complete guided setup

4 & 5

Step 4



Tip: Have your wireless network name and password handy.

Follow the on-screen instructions on your Roku TV.

If you aren't ready to connect your TV to a wireless network, you can still use it as a regular TV.

Step 5 (Optional)

Watching local broadcast TV? How do you scan for channels?

If you connected your TV to an antenna or cable wall jack (no box):

1) When the setup wizard is complete, select the ANTENNA icon  from the home screen.

 
2) Follow the on-screen instructions.

3) Whenever you want to watch local broadcast TV, select ANTENNA icon .

4) Connect a USB memory stick to enjoy photos, music, and movies, or to enable Live TV Pause. Live TV Pause is only available on the Antenna input of your Roku TV and requires a dedicated USB 2.0 compatible flash drive with at least 16 GB of storage to record video. The Live TV Pause feature requires a Roku account and active internet connection.

Activate your smart TV

6

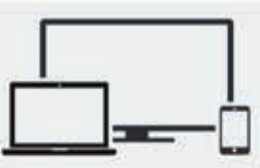

Activate your Roku TV using your computer, smartphone, or tablet to link to a Roku account. You need a Roku account to activate your Roku TV and access entertainment across thousands of streaming channels.

Note: Roku doesn't charge for activation support – beware of scams.

Roku accounts are free and while a valid credit card number is not required to create a Roku account, saving your credit card information makes renting and purchasing entertainment from the Roku Channel Store fast and convenient.

Once connected to your account, your TV will automatically update with the latest software, and you can start streaming immediately.

And setup is done...congratulations!

 
Continue using the remote to personalize your home screen and channel line-up, stream movies, and so much more. If you have an antenna connected, just click the tuner tile to watch broadcast TV channels. The fun has just begun!

Getting to know your TV

TV FRONT

  
A

TV BACK

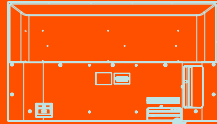  
B

  
C

  
D E F F G H I J

A

STATUS LIGHT

Glow when the TV is in standby, flashes once with each button press of the remote control.

B

POWER BUTTON

Press and hold for power on/off. (Location may vary by model.)

C

COMPOSITE AV IN

If your device isn't able to connect using HDMI®, connect to your TV using standard yellow/white/red cables.

D

RESET BUTTON

Press and hold for factory reset. Careful, you will lose all your settings!

E

HEADPHONE OUT

Connect headphones or other external speakers.

F

3 HDMI PORTS

Connect cable box, Blu-ray player, gaming console, or other devices to your TV using HDMI cables.

G

HDMI ARC PORT

Connect HDMI ARC (audio return channel) capable audio devices like sound bars or AV receivers.

H

AIR/CABLE IN

Connect Cable TV feed or an outdoor VHF/ UHF antenna.

I

DIGITAL AUDIO OUT

Connect an optical cable to an external digital audio system.

J

USB PORT

Connect a USB device for browsing photos, music and movies.

NOTE: Actual placement of TV ports may vary by model.