

Permanence rating for EPSON prints framed under glass*

EPSON Inkjet Papers	Current Printer Models					PictureMate® Series
	Current Printer Models					
	NX Series, WorkForce® Series, WorkForce Pro Series	Artisan® Series, EPSON Stylus® Photo 1400	EPSON Stylus Photo R1900, R2000	EPSON Stylus Photo R2880, R3000, R3880		
			(Color prints)	(B&W prints)**		
Glossy						
Photo Paper Glossy	90 years					
Premium Photo Paper Glossy	83 years	98 years	>100 years	85 years	>200 years	
Premium Photo Paper Semi-gloss			85 years			
Ultra Premium Photo Paper Glossy	84 years	98 years				
Ultra Premium Photo Paper Luster			97 years	83 years	>315 years	
PictureMate 200 Series Print Pack — Glossy						96 years
Matte						
Bright White Paper	89 years		>130 years			
Brochure and Flyer Paper Matte	118 years					
Premium Presentation Paper Matte	118 years	97 years	>150 years			
Premium Presentation Paper Matte Double-sided	118 years					
Ultra Premium Presentation Paper Matte	71 years		>110 years	82 years	>110 years	
Scrapbook Photo Paper Matte	94 years		100 years			
Fine Art						
Watercolor Paper — Radiant White			200 years	118 years	>200 years	
Velvet Fine Art Paper			>100 years	61 years	>115 years	
UltraSmooth® Fine Art Paper				108 years	>205 years	
Premium Canvas — Satin				75 years	>105 years	
Exhibition Fiber Paper				90 years	>200 years	

*Lightfastness ratings are based on accelerated testing of prints on specialty media displayed indoors, under glass. Actual print stability will vary according to media, printed image, display conditions, light intensity and atmospheric conditions. Lightfastness ratings do not measure paper deterioration, such as yellowing. Epson does not guarantee the longevity of prints. For maximum print life, display all prints under glass or termination or/a properly store them.

**Printed in "Advanced Black and White Print Mode".

As with traditional photos, proper care will maximize display life. For indoor display, Epson recommends that prints be framed under glass or in a protective sleeve to protect the prints from atmospheric contaminants, the humidity, cigarette smoke, and high levels of ozone. And, as with all photographs, the prints should be kept out of direct sunlight. For proper storage, Epson recommends that your prints be stored in a photo album (or plastic photo storage box or museum storage box) in acid-free, archival sleeves commonly available from most camera shops and other retailers. By taking these steps to protect prints from direct sunlight and contaminants, you can preserve your photos for many years.