

CONNECTING IP CAMERAS

Test cameras and connections prior to mounting.

If specialty camera(s), such as a PTZ, are included in your package, please review instructions for specialty camera(s) before proceeding.

A


Plug the CAT5E Extension Cable into the camera's network port.

B

Plug the other end of the Extension Cable into one of the POE ports on the back of the NVR.

Repeat steps A & B for each camera.

To add remote cameras to your NVR, see the instructions for using a POE power injector.

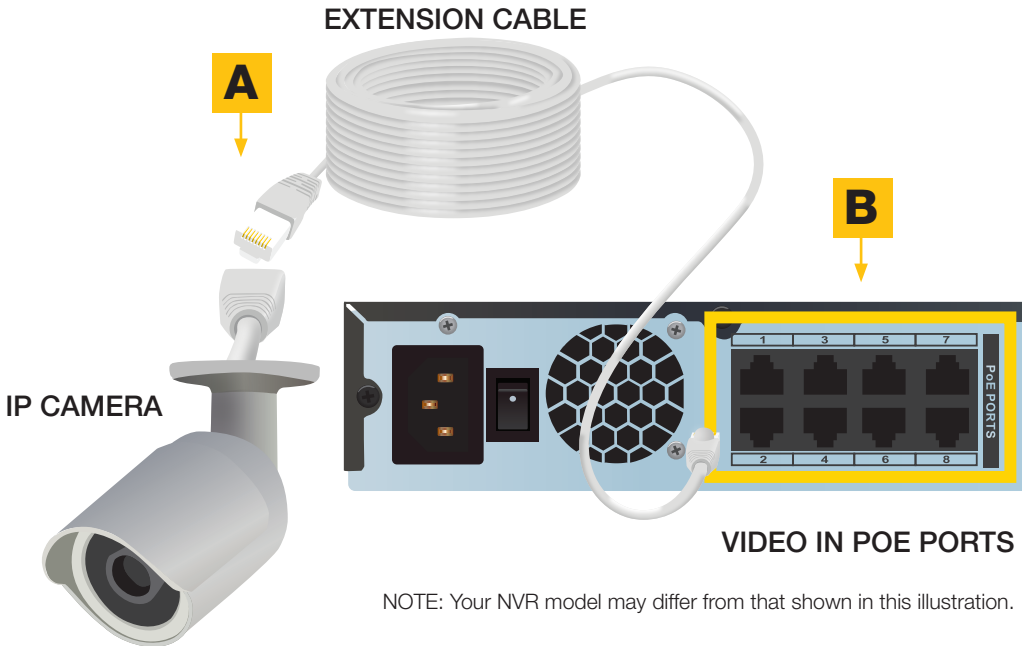

When doing final installation, connect your cameras one at a time. The NVR will assign cameras a channel in the order that they are connected.