


**BHG Sawyer Cove 12ft x 10ft Barrel-Roof Gazebo**  
**ASSEMBLY INSTRUCTIONS**  
**ITEM# BH15-092-099-15**

**ATTENTION: THIS PRODUCT IS NOT FOR COMMERCIAL USE**

**INTENDED FOR RESIDENTIAL USE ONLY.**

Questions, problems, missing parts with this product? Do not return to your retailer, please call our customer service department 9:00 a.m. to 5:00 p.m. Eastern Standard Time Monday through Friday Phone # 1-800-457-4652 or contact us at [www.numarkcustomerservice.com](http://www.numarkcustomerservice.com)

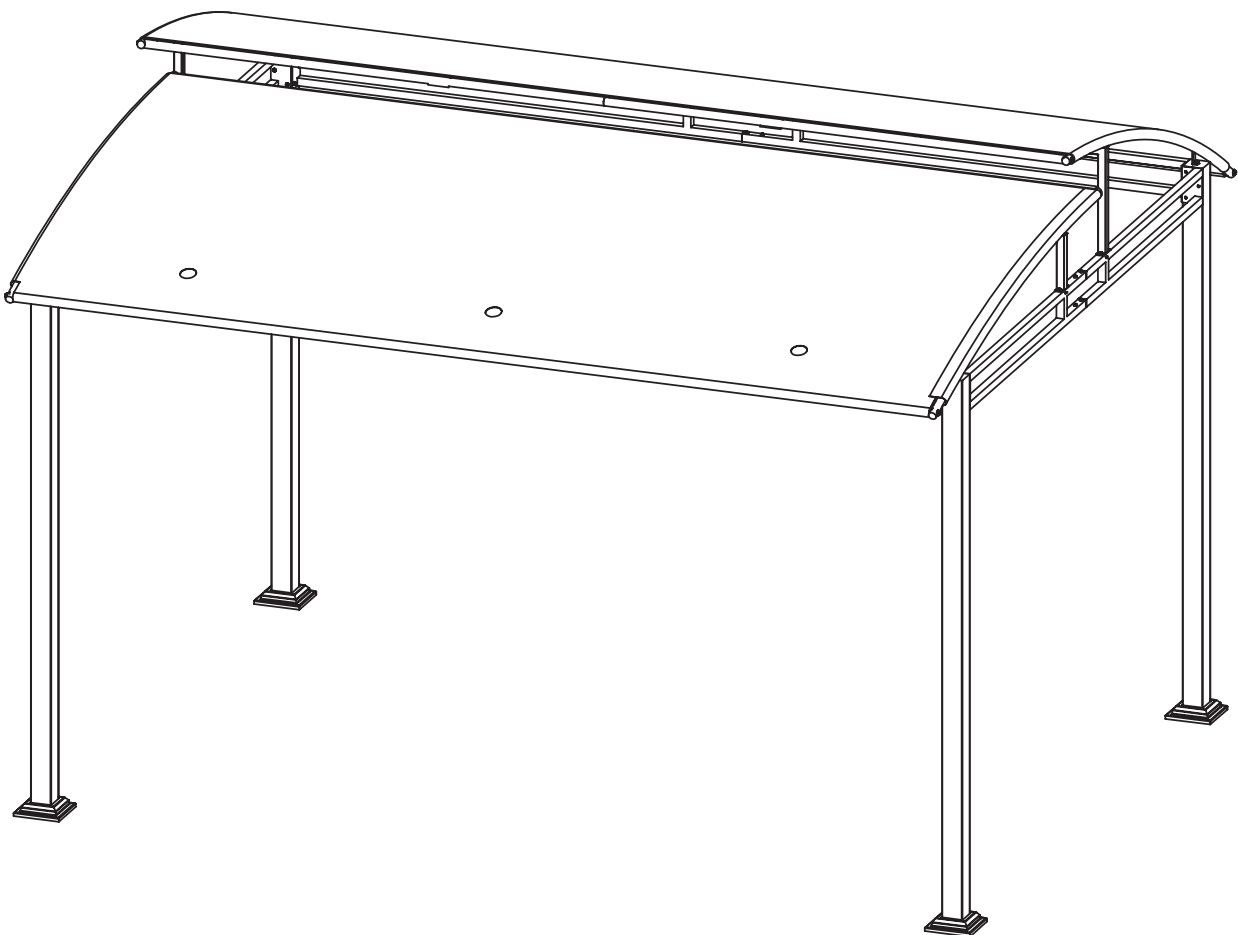

**DON'T RETURN TO STORE**

## WARNINGS AND CAUTIONS

---

- \* This gazebo is made for explicit purpose of providing limited outdoor sun shade and is not to be used as a toy, shelter or tent. This pergola is not intended for inclement weather in any form including, but not limited to: rain, hail, sleet, snow and/or wind. Do not locate structure near any open flame. Do not use structure as a support. Do not shake, lean or climb on structure. Children under age of 10, near the structure, should be supervised by a competent adult at all times.
- \* Read through all the instructions before beginning assembly. Unpack and identify all the parts.
- \* Assembly by four people is recommended.
- \* Estimated Assembly Time: 90 minutes
- \* **Keep all flame and heat sources away from canopy fabric.**

The canopy is made with flame-resistant fabric which meets CPAI-84 specifications. It is not fireproof. The canopy fabric will burn if left in continuous contact with flame source. The application of any foreign substance to the canopy fabric may render the flame-resistant properties ineffective.

## CLEANING AND MAINTENANCE


















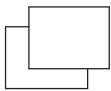
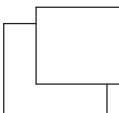
---

- \* Wash with a mild solution of soap and water; rinse thoroughly. Dry completely. Do not use bleach or solvents. Cover furniture with outdoor furniture covers when not in use.




**DON'T RETURN TO STORE**

Remove all components from the polybag and unwrap all package materials. Please count the components, there are:

NO.	Part	Description	Quantity
A		Leg Post	4
B		Slim Bar	2
C		Slim Bar	2
D		Slim Bar	2
E		Slim Bar	2
F		Supporting Bar	1
G		Supporting Bar	1
H		Supporting Bar	1
I		Supporting Bar	1
J		Canopy Side Bar	4
K		Canopy Side Bar	4
L		Curved Support Bar	2
M		Curved Support Bar	2
N		Connection Bar	2
O		Connection Bar	2
P		Base Plate	4
Q		Post Base	4
R		Short Canopy	1
S		Long Canopy	1





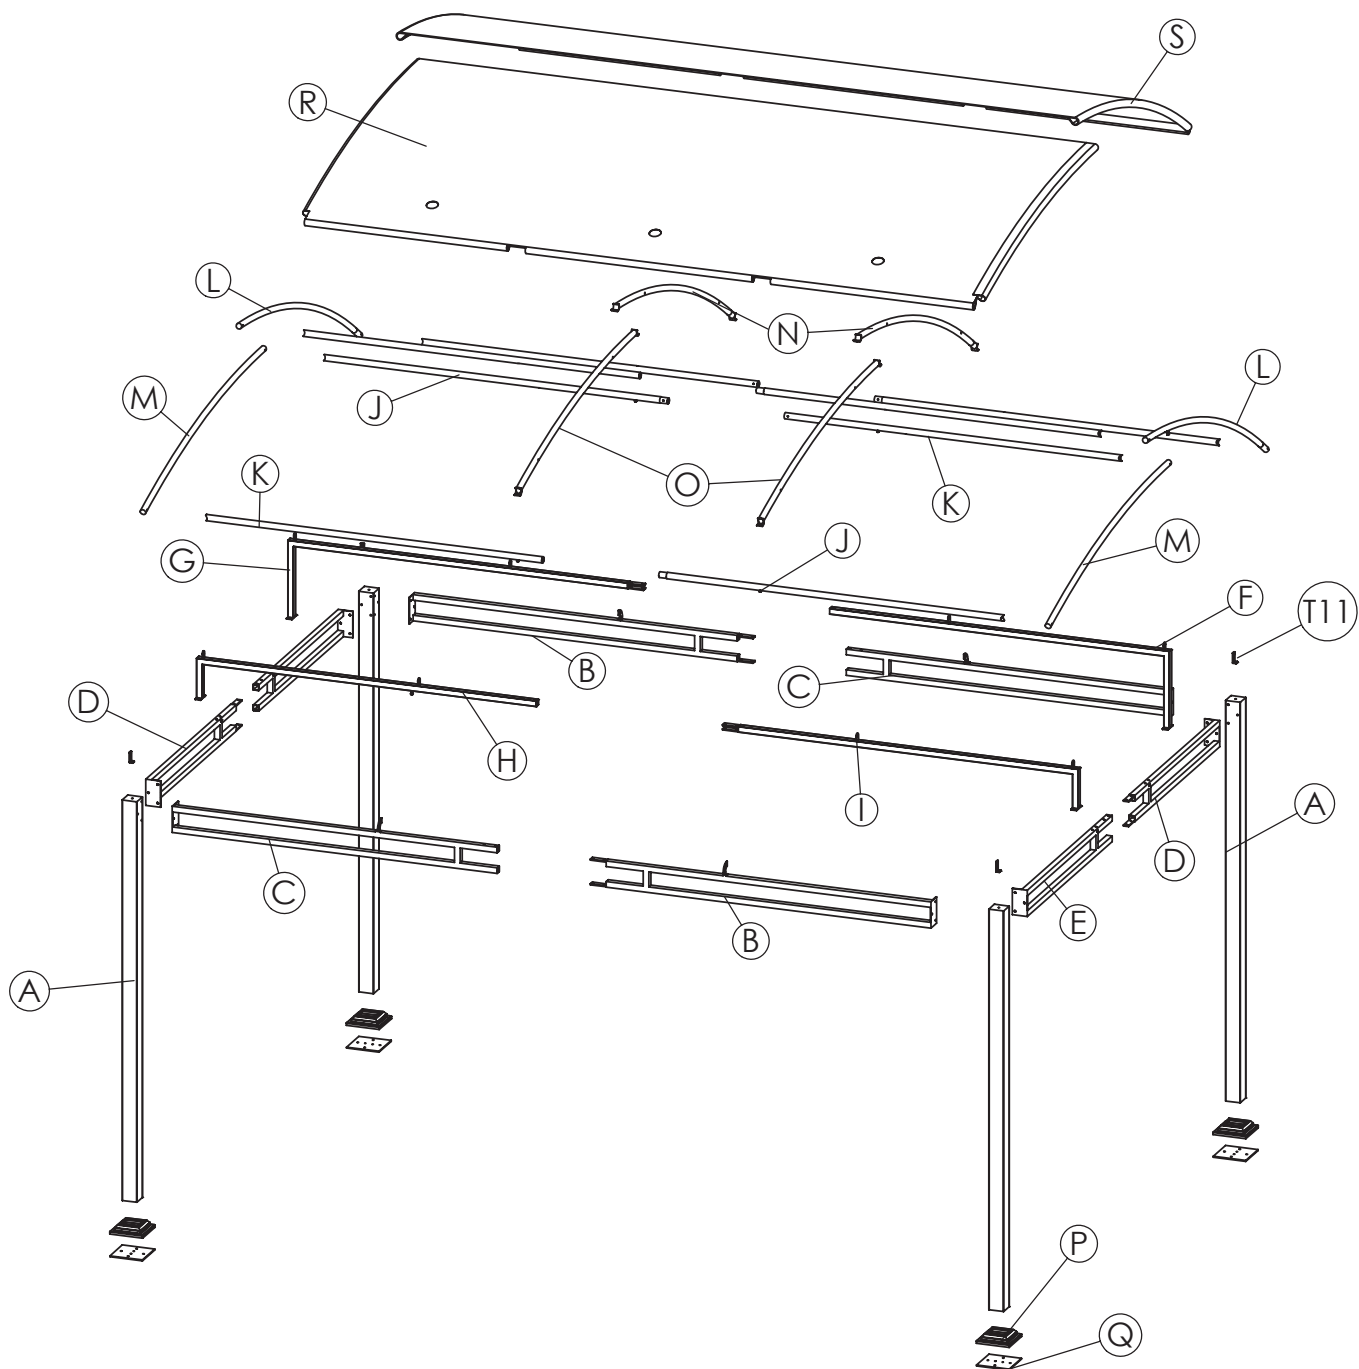









**DON'T RETURN TO STORE**



**DON'T RETURN TO STORE**

# ACCESSORIES

NO.	Part	Description	Quantity
T1		Counter Sink Bolt	8+1 spare
T2		M6x15L Bolt	28+2 spare
T3		M6x20L Bolt	48+2 spare
T4		M6x50L Bolt	16+1 spare
T5		M6 Small Metal Washer	76
T6		M6 Large Metal Washer	24
T7		M6 Nut	8+1 spare
T8		L-shaped Bracket	4
T9		Lawn Stake	16
T10		Open Hex Wrench	2
T11		Allen Wrench	2
T12		Assembly instructions sheet	1



**DON'T RETURN TO STORE**

## Step 1

T1 x 8



Counter Sink Bolt

T2 x 4



M6x15L Bolt

T5 x 4




M6 Small Metal  
Washer

T8 x 4



L-shaped Bracket

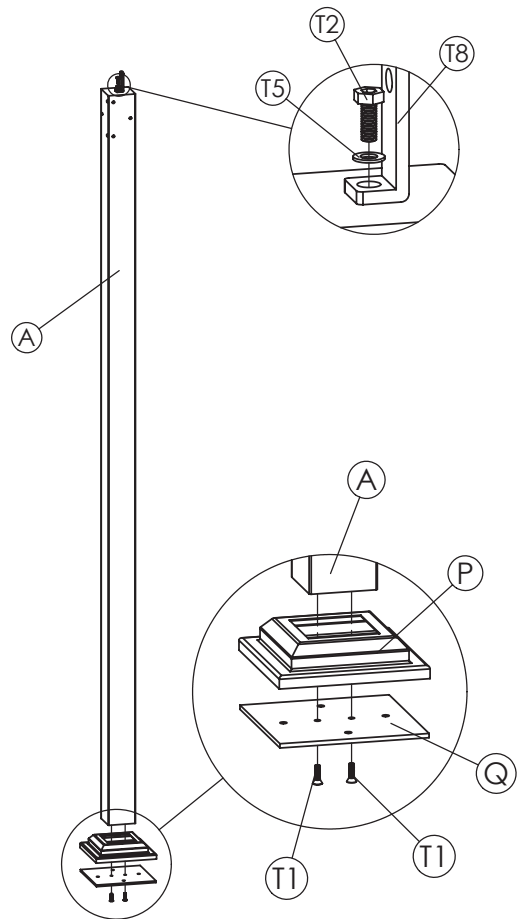

**NOTE:** The side with the counter sink hole should be outside for the bracket Q.

Do not tighten completely for top M6x15L bolt, but please tighten counter sink bolt. Repeat procedure for the other three leg post.

## Step 2

T2 x 8




M6x15L Bolt

T5 x 8



M6 Small Metal Washer

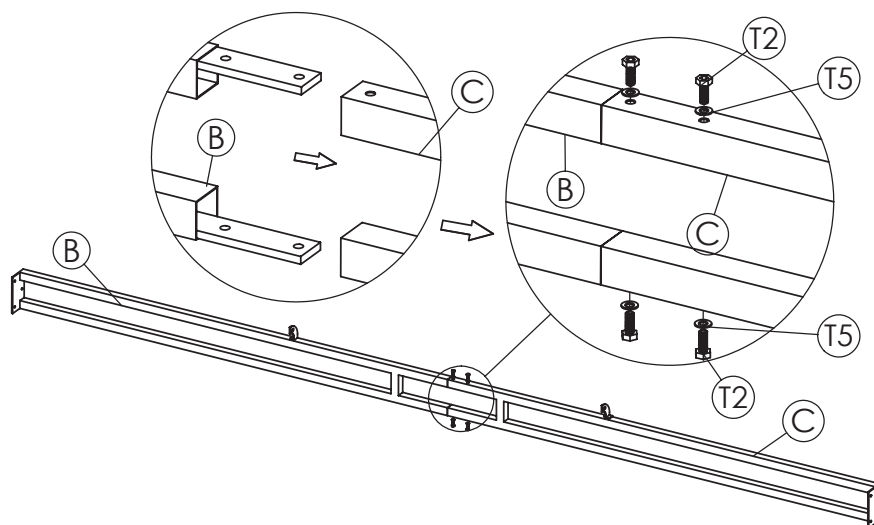


Do not tighten completely.


Repeat procedure for the other top beam B & C.




**DON'T RETURN TO STORE**

## Step 3

T2 x 8  
  
 M6x15L Bolt

T5 x 8  
  
 M6 Small Metal Washer

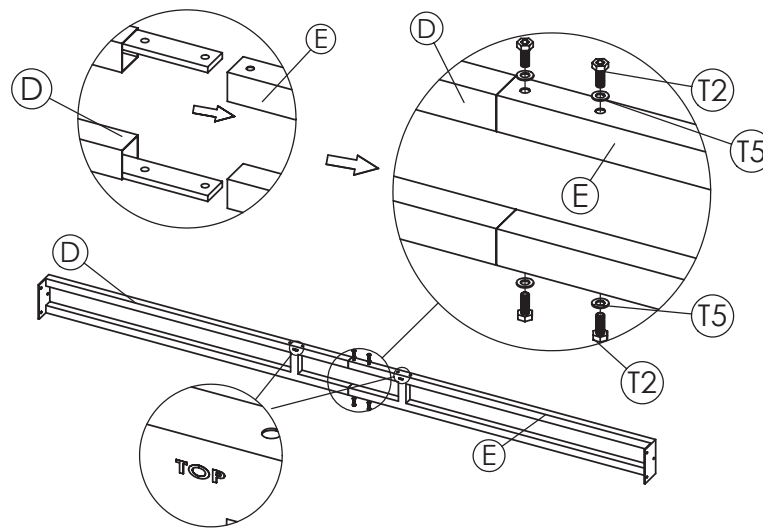



**NOTE:** The 'TOP' means the holes should be up.


Do not tighten completely.

Repeat procedure for the other top beam D and E.

## Step 4

T2 x 4  
  
 M6x15L Bolt

T5 x 4  
  
 M6 Small Metal Washer

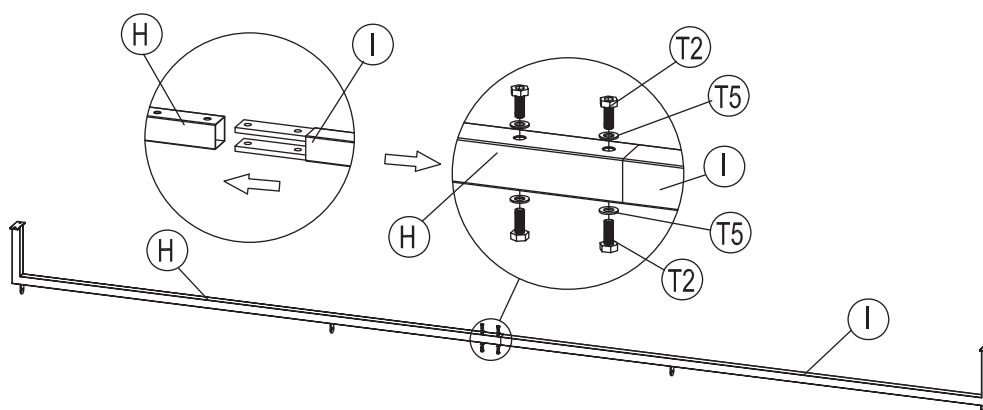

**NOTE:** The brackets' direction of the supporting bar H & I should keep the same.

Do not tighten completely.


Repeat procedure for the other three holes.




**DON'T RETURN TO STORE**

## Step 5


T2 x 4  
  
M6x15L Bolt

T5 x 4  
  
M6 Small Metal Washer

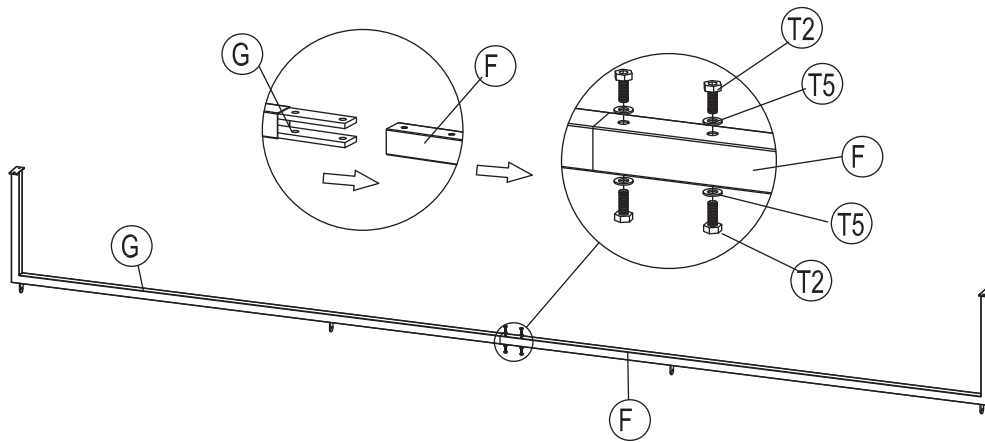

**NOTE:** The brackets' direction of the supporting bar F & G should keep the same.  
Do not tighten completely.  
Repeat procedure for the other three holes.

## Step 6

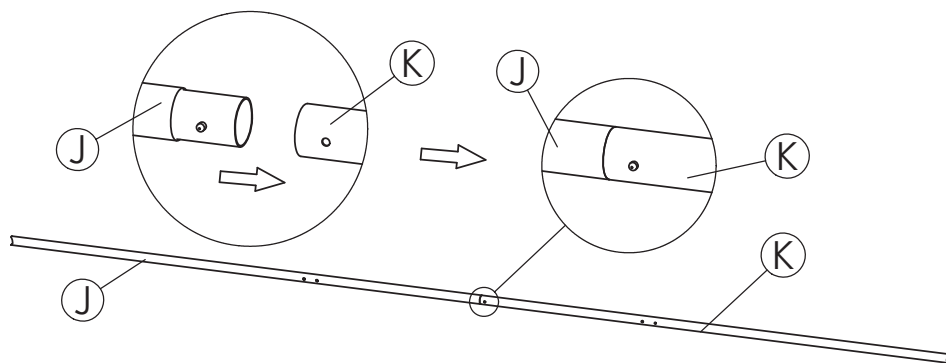


Repeat procedure for the other three canopy side bar J and K.




**DON'T RETURN TO STORE**



## Step 7

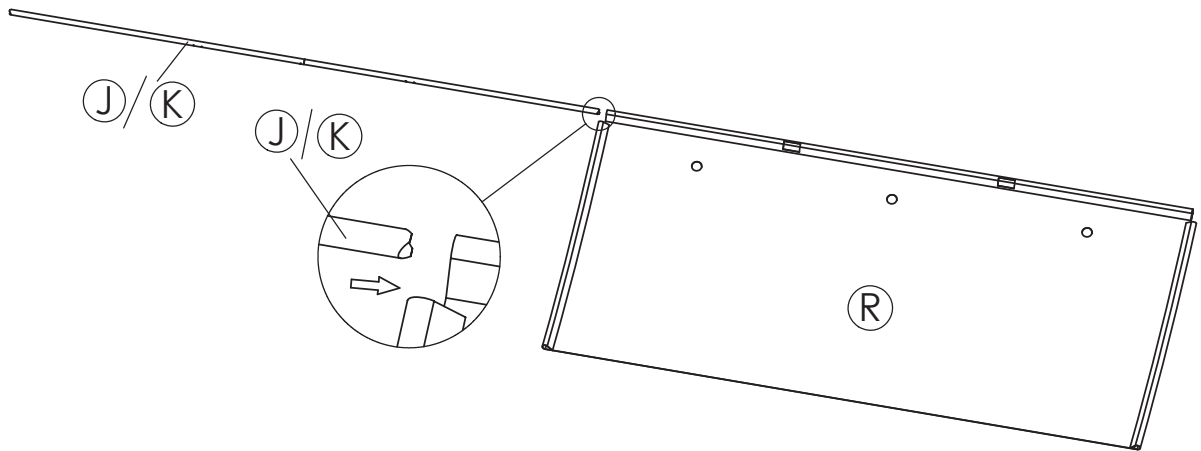

## Step 8

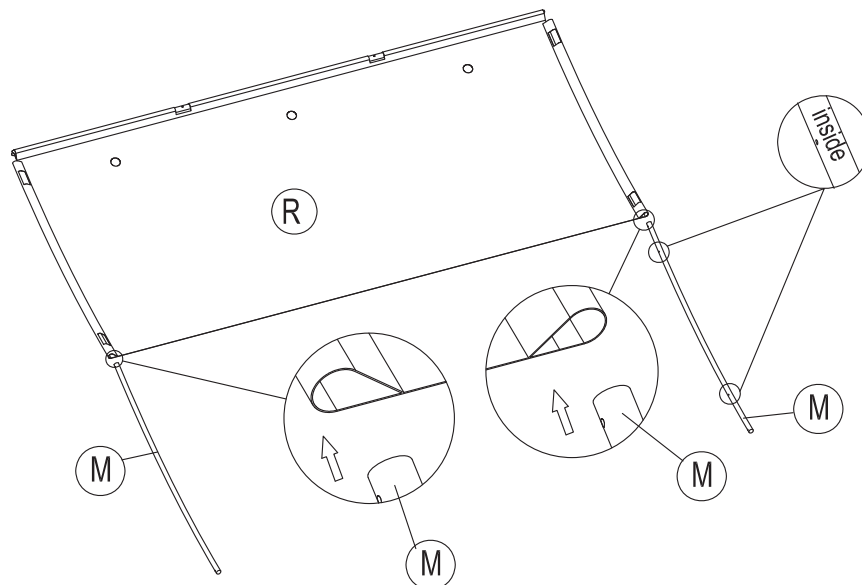

**NOTE:** The side marking the 'INSIDE' should face inside .

Repeat procedure for the other curved support bar M.



**DON'T RETURN TO STORE**

## Step 9

T4 x 4




M6x50L Bolt

T5 x 4



M6 Small Metal Washer

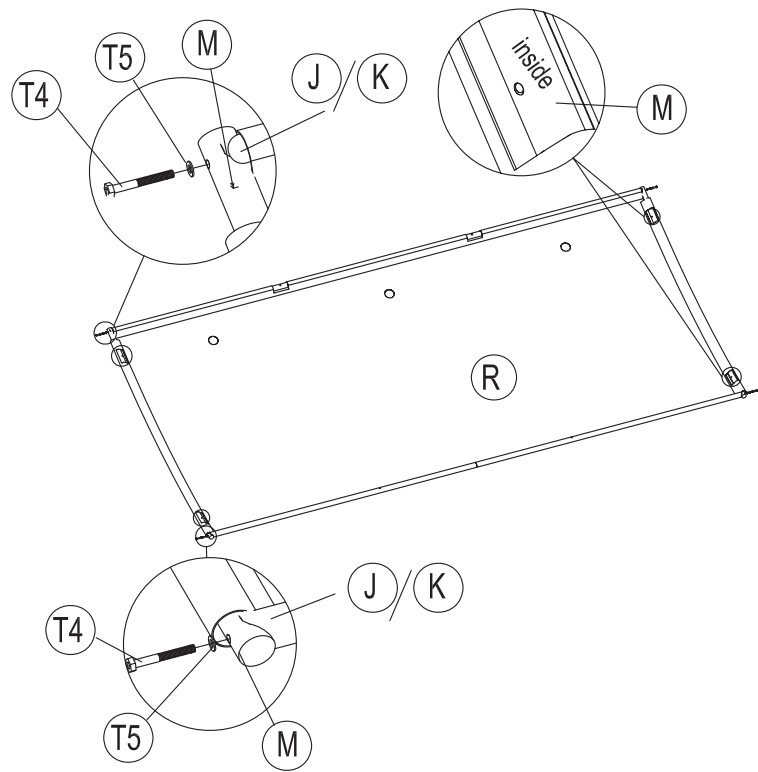

**NOTE:** The side marking the 'INSIDE' should face inside .

**Do not tighten completely.**

**Repeat procedure for the other side.**

## Step 10

T3 x 4




M6x20L Bolt

T5 x 4



M6 Small Metal Washer

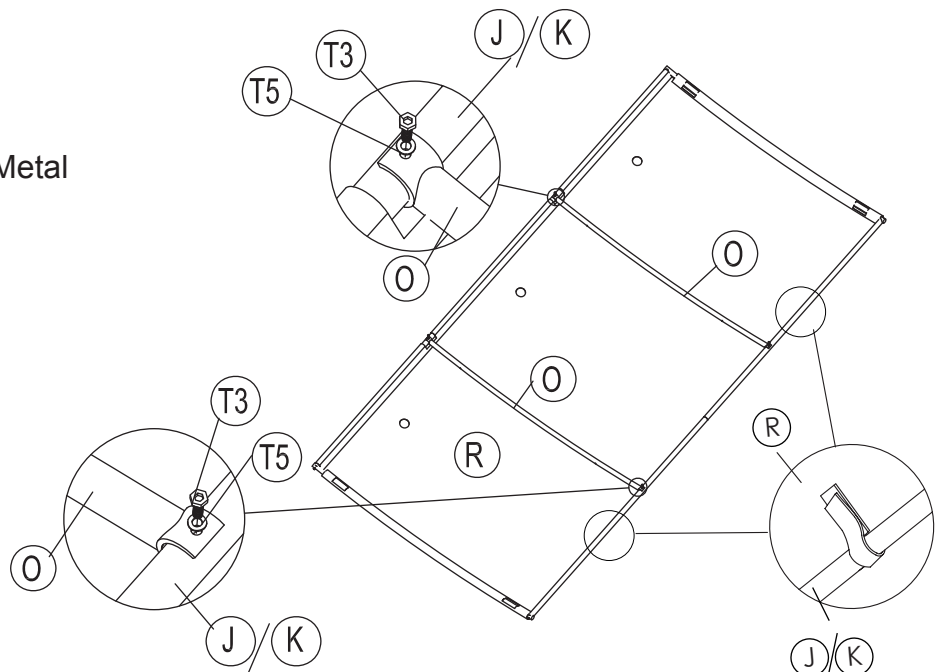


**Do not tighten completely.**

**Repeat procedure for the other connection bar.**




**DON'T RETURN TO STORE**

## Step 11

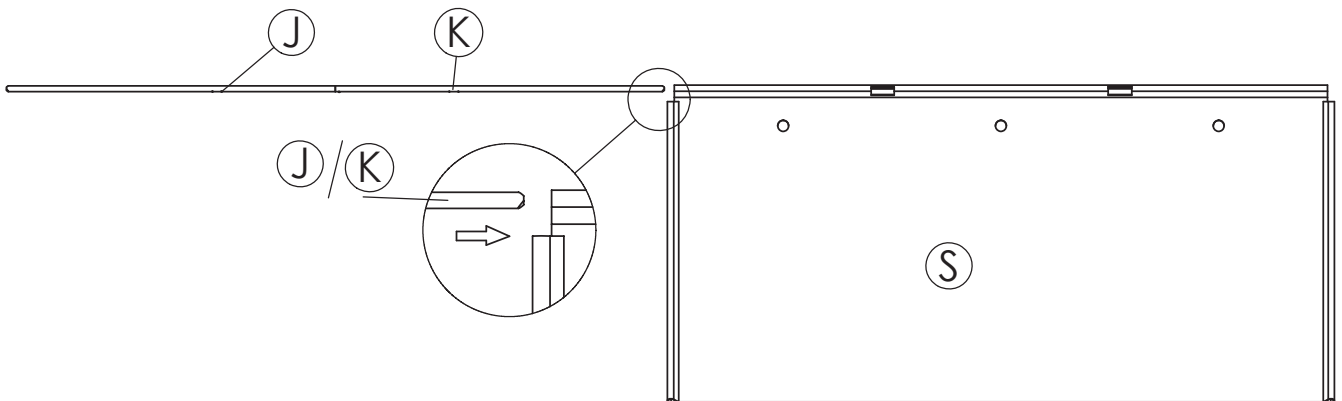

## Step 12

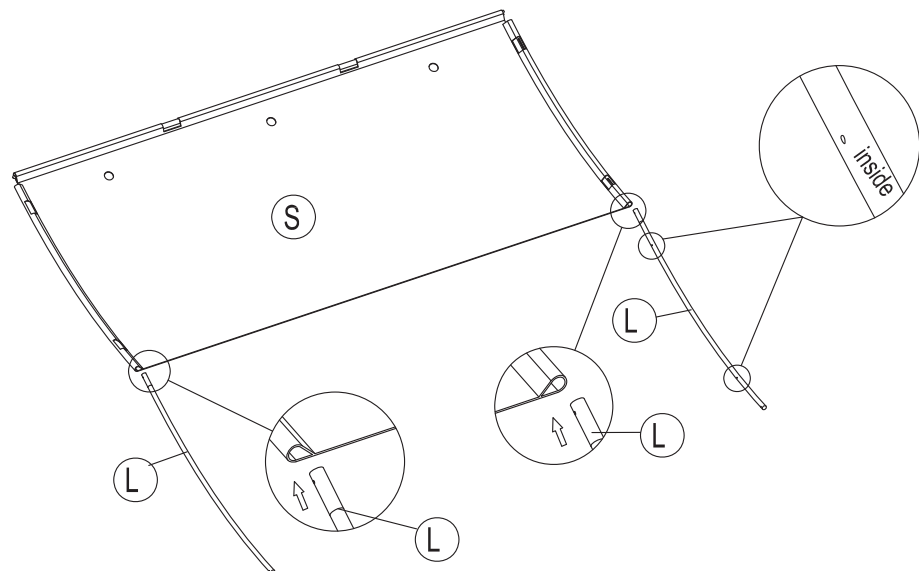

**NOTE:** The side marking the 'INSIDE' should face inside .  
Repeat procedure for the other curved support bar L.



**DON'T RETURN TO STORE**

## Step 13

T4 x 4




M6x50L Bolt

T5 x 4



M6 Small Metal Washer

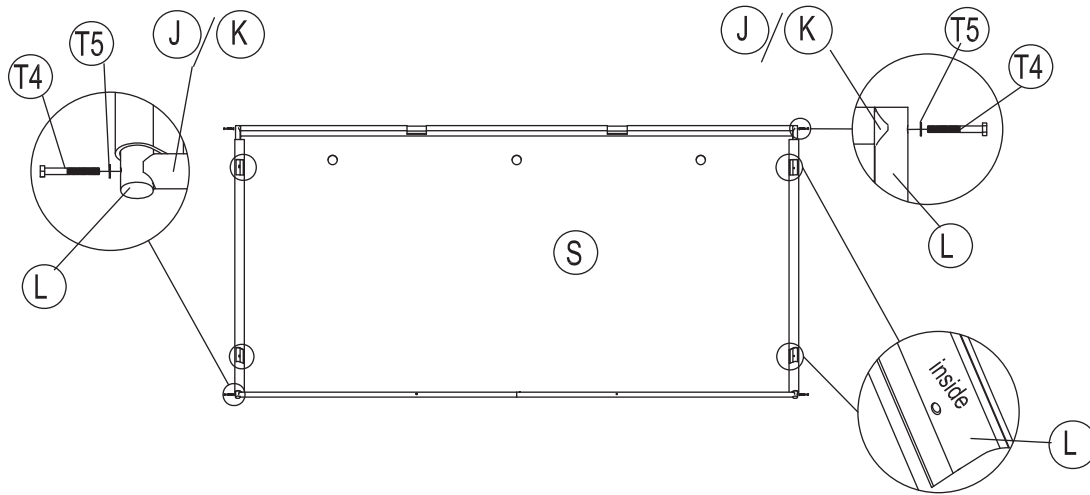

**NOTE:** The holes of the bar J&K should face up and show .

Do not tighten completely.

Repeat procedure for the other side.

## Step 14

T3 x 4




M6x20L Bolt

T5 x 4



M6 Small Metal Washer

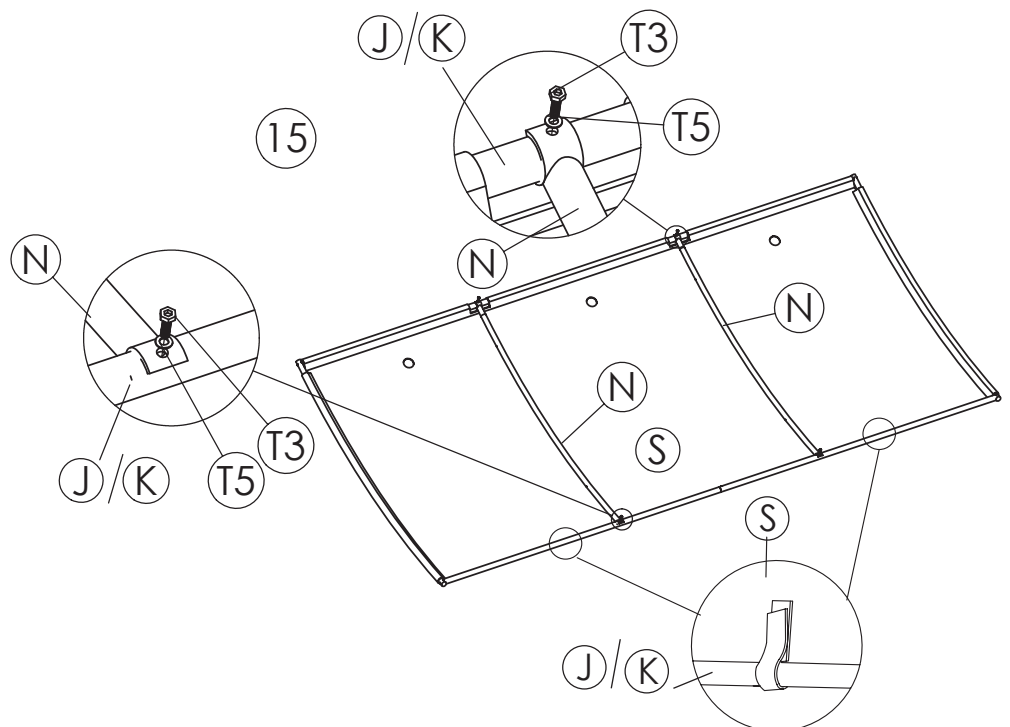

Do not tighten completely.

Repeat procedure for the other connection bar.



**DON'T RETURN TO STORE**

## Step 15

T3 x 24




M6x20L Bolt

T5 x 24



M6 Small Metal Washer

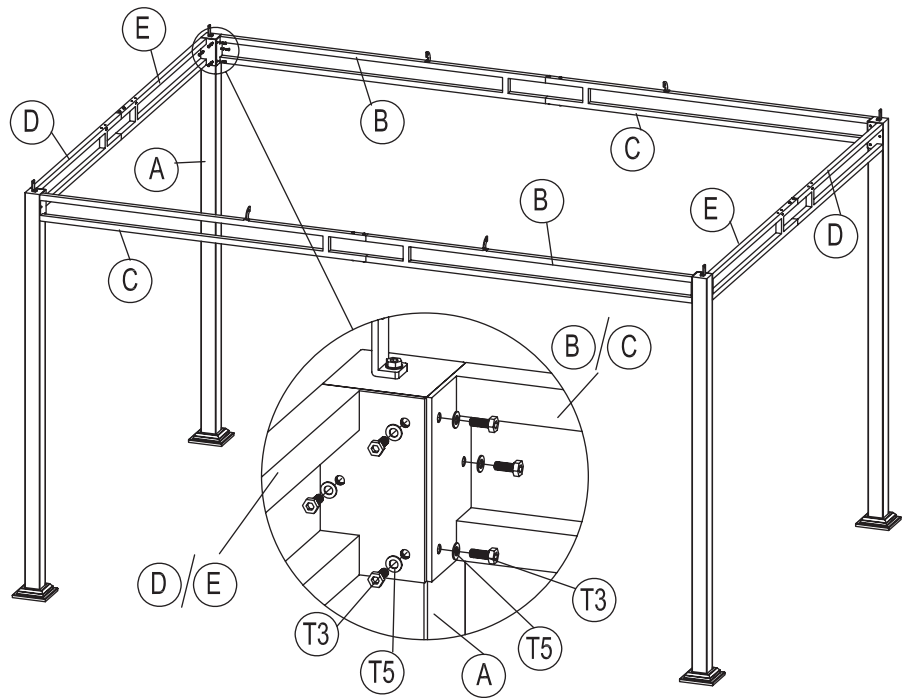

**Do not tighten completely.**

**Repeat procedure for the other three sides.**

## Step 16

T3 x 8




M6x20L Bolt

T5 x 8



M6 Small Metal Washer

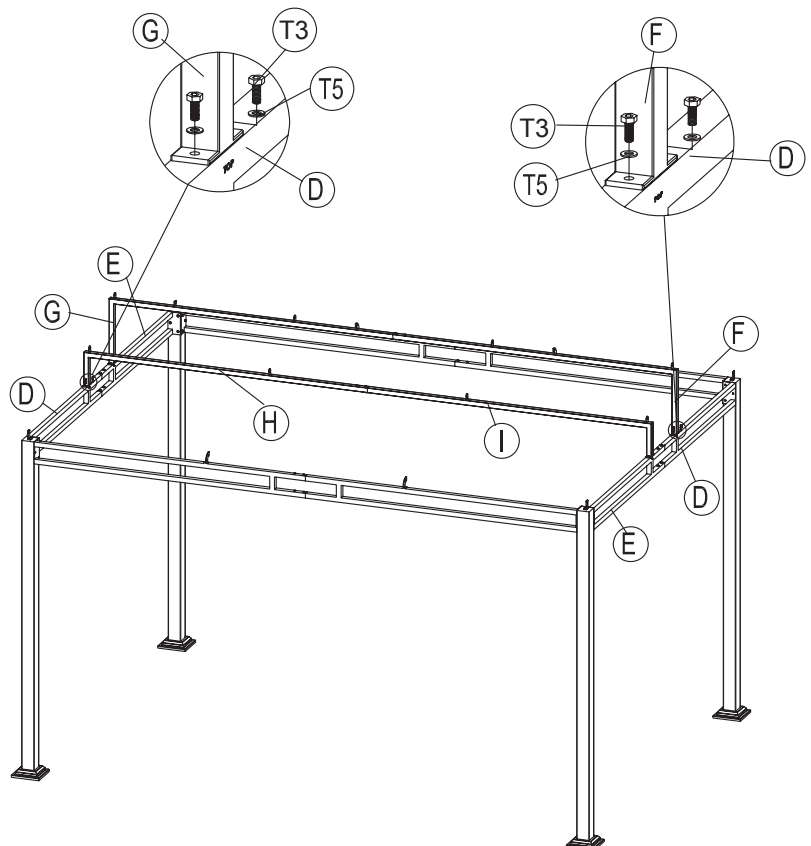

**Do not tighten completely.**

**Repeat procedure for the other side.**



**DON'T RETURN TO STORE**

## Step 17

T3 x 4



M6x20L Bolt

T4 x 4



M6x50L Bolt

T6 x 12




M6 Large Metal Washer

T7 x 4



Nut

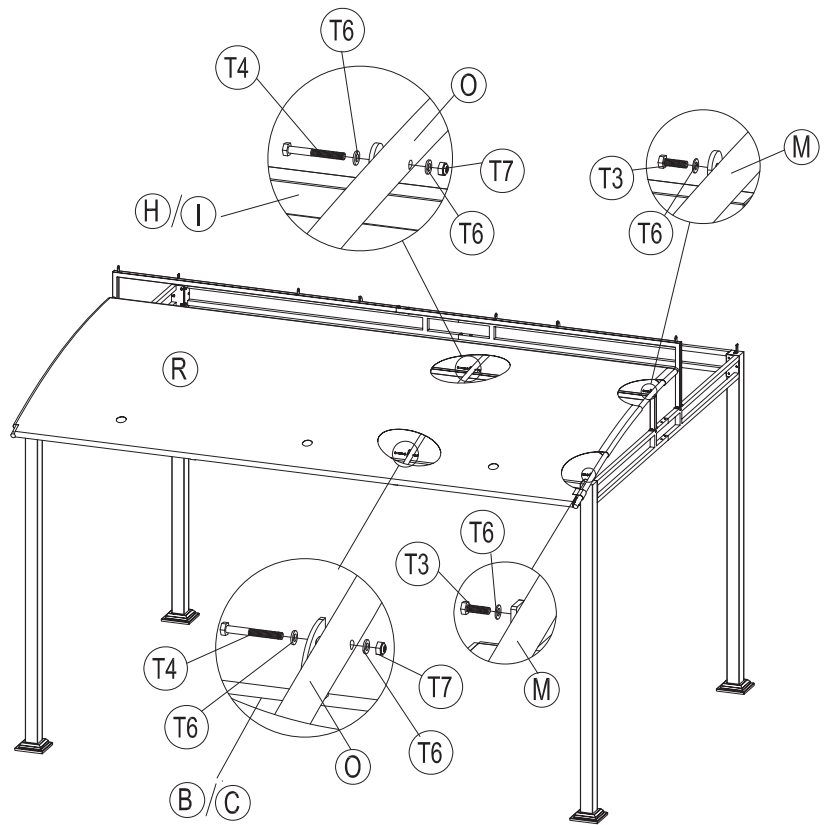

**Do not tighten completely.**

**Repeat procedure for the other connection bar O and curved support bar M.**

## Step 18

T3 x 4



M6x20L Bolt

T4 x 4



M6x50L Bolt

T6 x 12




M6 Large Metal Washer

T7 x 4



Nut

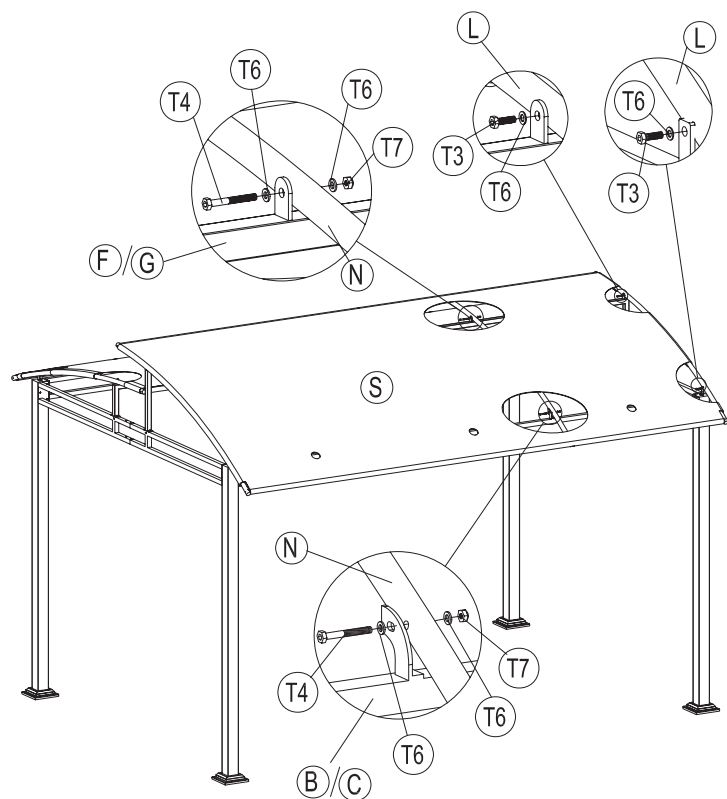

**Do not tighten completely.**

**Repeat procedure for the other connection bar N and curved support bar L.**

**Securely tighten all bolts and nuts.**




**DON'T RETURN TO STORE**

## Step 19


T9 x 16



Lawn Stake

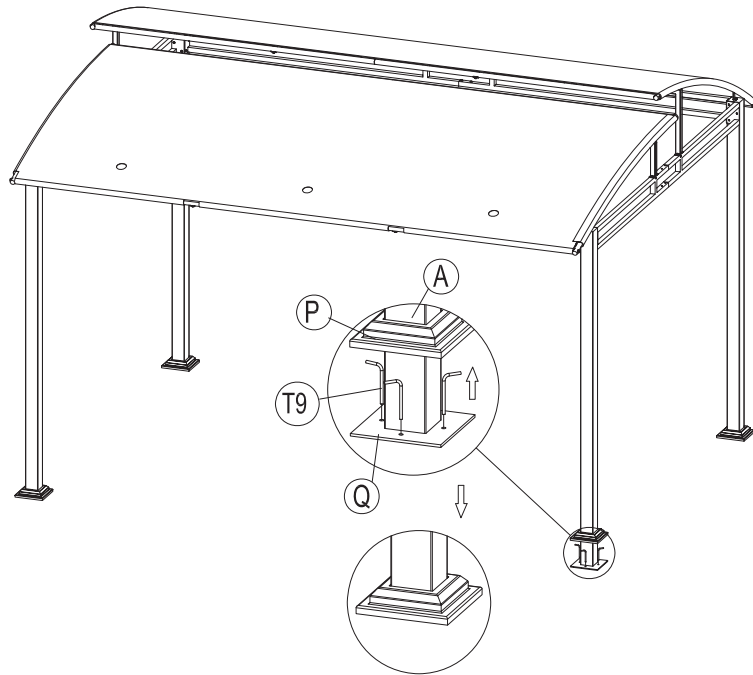

Repeat procedure for the other three leg post.

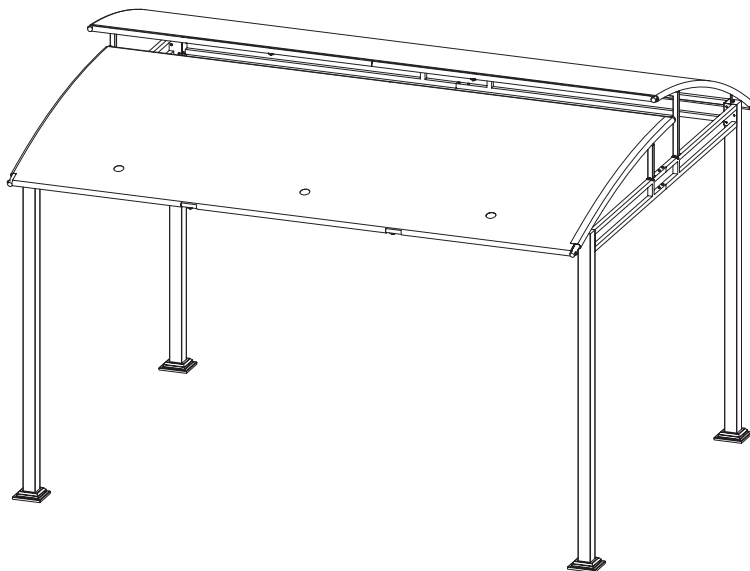

Now you can use your gazebo!



**DON'T RETURN TO STORE**