

IMPORTANT
Failure to follow instructions
carefully may cause damage.
Save instructions or
visit command.com




17017CLR
command.com


APPLY



1
Clean surface with
isopropyl rubbing
alcohol*. Do not use
household cleaners.

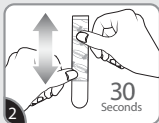

2
Remove black liner.
Apply strip to wall.
Press entire strip
firmly for 30 sec.

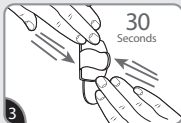

3
Remove blue liner. Press
clip to strip firmly for 30
sec. Wait **1 HOUR** before
use.

*Isopropyl rubbing alcohol may be found in most pharmacies and/or hardware stores.


REMOVE



1
Hold clip gently
in place.



2
Never pull the strip
towards you! Always
pull straight down.

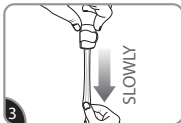

3
Stretch the strip slowly
against the wall at least
15 cm to release.

Clips can be reused with Command® Clear Small Refill Strips.

▲ CAUTION:

Do not hang over beds or use on
wallpaper. May not adhere well
to vinyl surfaces.

Do not hang valuable or
irreplaceable items, clocks or
framed pictures.

Use only one hook per item
hung. For indoor use only. Apply
to surfaces between 10°-40°C.
Wait a minimum of 28 days after
painting to apply.

Not intended for picture hanging.
Instead use Command® Picture
Hanging Strips, Sawtooth or
Wire-Backed Hangers.

Clips made in Mexico/ Strips
made in Singapore.

3M and Command
are trademarks of 3M.

© 3M 2017.

All rights reserved.

34-8717-37010-0

command.com

The following statements do not apply to products distributed in Australia
and New Zealand. Consumers must rely on their statutory rights.

WARRANTY & LIABILITY:

This product will be free from defects in material and manufacture. Please
read the instructions carefully. 3M will not be liable for any loss or damage
caused by incorrect use, application or removal of the product. If this
product is found to be defective, your remedy shall be, at 3M's option,
replacement of the product or refund of the purchase
price. To the extent permitted by law, 3M will not
be liable for any other loss or damage arising
from the use of this product.

Dist. By:

3M, Construction and Home
Improvement Markets Division

3M Australia Pty Limited
Bldg A, 1 Rivett Road
North Ryde, NSW 2113
PH: 1800 025 725

3M New Zealand Ltd
94 Apollo Drive, Rosedale,
Auckland 0632
PH: 0800 436 435

3M Technologies (S) Pte Ltd.

1 Yishun Avenue 7,
Singapore 768923
PH: (65) 6450-8888

